

KOKO



QUICKGUIDE:
SKAARHOJ QUICK PAD REMOTE FOR KOKO

Designed & manufactured in Barcelona by  OVIDE

REQUIREMENTS

- Ovide Koko with a v1.3 firmware or newer
- Skaarhoj Quick Pad device
- Minimum TCP/IP network knowledge
- A computer running Windows/Mac/Linux

SETUP SKAARHOJ QUICK PAD TO BLUE PILL MODE:



1. Download Skaarhoj's firmware updater: <https://www.skaarhoj.com/support/firmware-updater>
2. Connect your Skaarhoj Quick Pad to your computer using the included USB cable.
Do NOT connect the Ethernet cable to Skaarhoj.
3. Start the app you just installed skaarhoj Quick Pad Remote.
4. Click "Online configuration".
5. Choose Blue Pill Mode.
6. Scroll down to the bottom of the page and set the IP address you want your Skaarhoj device to use.
As an example* you can set it to:



- 6.1. Static
- 6.2. IP 192 168 1 201
- 6.3. Subnet 255 255 255 0
- 6.4. Gateway 192 168 1 1
- 6.5. DNS 1111
- 6.6. Enable Unisketch Raw Panel

Network configuration

DHCP Static

IP: 192 168 2 142

Subnet: 255 255 255 0

Gateway: 192 168 2 1

DNS: 1 1 1 1

Devices


Enabled	Name	IP
<input checked="" type="checkbox"/>	UniSketch Raw Panel	192 168 2 142

***IMPORTANT NETWORK SETTINGS:**
The examples provided above are just a guide in case you don't know how to setup a basic network. It is important that if you setup following this example, do NOT connect Koko or Skaarhoj to an existing network. If you are familiar with IP networks, feel free to set it as you want. You can connect as many Koko and Skaarhoj devices as you want to the same network, even across different subnets.

7. Return to Skaarhoj updater in your computer and click "Update firmware". The configuration will now be downloaded to your controller.
8. Your Skaarhoj will reboot.
9. Disconnect the USB from Skaarhoj.

SETUP YOUR KOKO TO CONNECT TO YOUR SKAARHOJ:

1. Turn on your Koko.
2. Connect a USB cable from Koko to your Skaarhoj device .
3. Use an ethernet cable to connect the Koko to the Skaarhoj device.
4. In Koko, Tap on button to open “Settings menu”

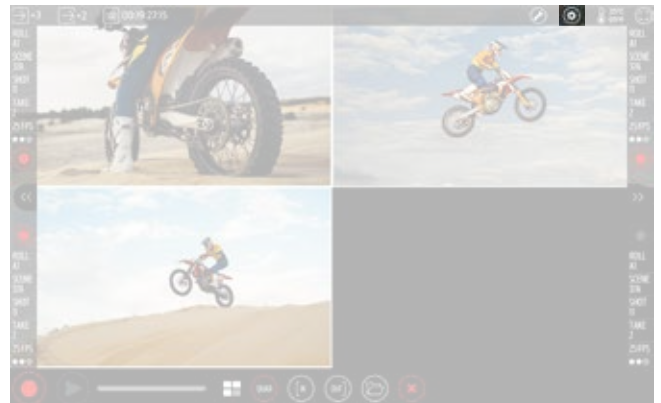


5. Tap on “Network”



6. Set the IP you want Koko to use and the IP of the Skaarhoj device to remote control it.
If you followed the example* in Skaarhoj configuration you can set it to:

- 5.1. Manual
- 5.2. IP address: 192.168.1.101
- 5.3. Subnet: 255.255.255.0
- 5.4. Gateway: 192.168.1.1
- 5.5. DNS: 1.1.1.1
- 5.6. Skaarhoj 192.168.1.201
- 5.7. Click Apply

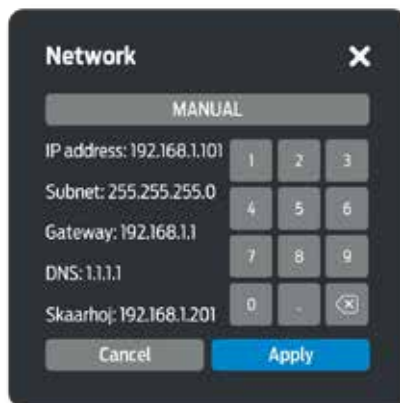

7. At this point, Koko will connect to your Skaarhoj and set the labels for each button.

TROUBLE SHOOTING:

If Koko does not connect, check that the IP shown in the Skaarhoj lower left field of the Koko network setting matches the IP shown in the lower left display of your Skaarhoj. Plug and unplug the network cable of the Koko to force a restart of the connection.